



Lock parts:

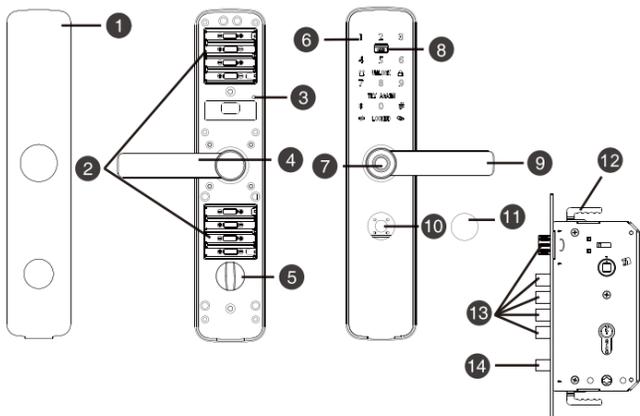

- 1 Back panel decoration plate
- 2 Battery box
- 3 Set button
- 4 Inside handle
- 5 Deadbolt knob
- 6 Touch keypad
- 7 Fingerprint sensor
- 8 RFID card reader
- 9 Outside handle
- 10 Cylinder hole
- 11 Cylinder cover
- 12 Multipoint-hook (optional)
- 13 Latches
- 14 Deadbolt

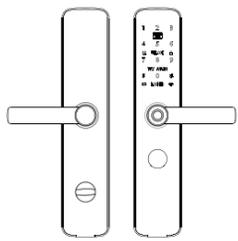


Opening method:  
Fingerprint  
Password  
RFID card  
APP  
Mechanical key

Outstanding Features:

- Voice instruction
- Emergency power
- Low battery alarm
- Burglar alarm

Specifications:

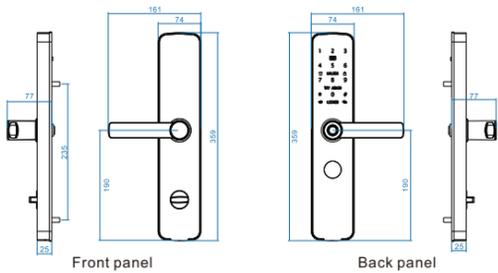

Parameters:

Working voltage: 4.5-6.5V, 4pcs 1.5V AA alkaline batteries  
Fingerprint capacity: 100pcs (can be extended)  
Finger's reading angle: any angle  
User password: 1pc on lock (10pcs Customized on APP)  
Password digits: 6 digits  
Admin password: 1pc  
Self-lock mode: 5 times wrong password input  
Card capacity: 100pcs  
Card type: MF1 card (13.56MHz)

Warning:

- Corrosive article is forbidden to touch the lock surface.
- Do not hang articles on handles.
- Make sure strike plate is well located so that latches can be smoothly slide into.
- Change batteries upon low voltage alarm.
- Make sure positive and negative pole of battery is installed correctly, new and old batteries cannot be mixed to use.
- Users can register fingerprints based on actual needs, but more than one fingerprint is suggested for spare.
- Clean fingerprint sensor by a dry and soft cloth if there is dirt.
- Suggest keeping well your mechanical key in car or office.

Model: Z701


Color: Pearl Matt Black  
Polished Chrome  
Coffee Gold




- Fingerprint identify
- Touch password
- RFID card reading
- Mechanical key
- APP opening

2、Setting guide


Lock components:

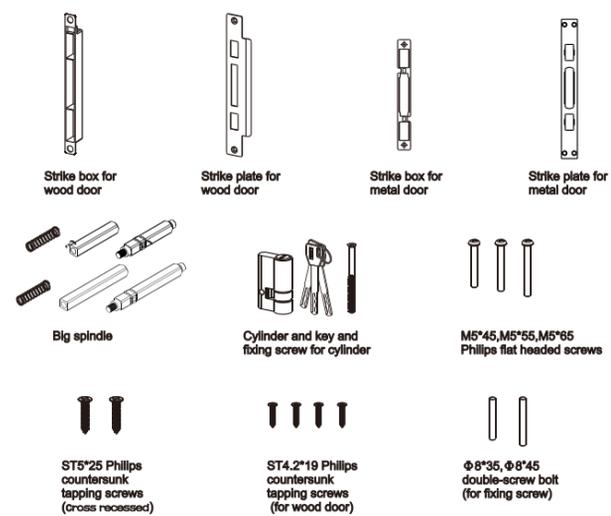

Workable mortise:

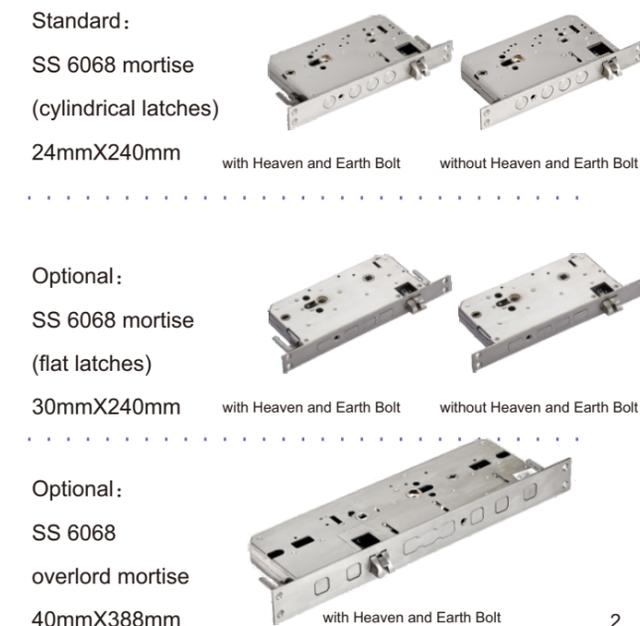


2.1 Login setting menu

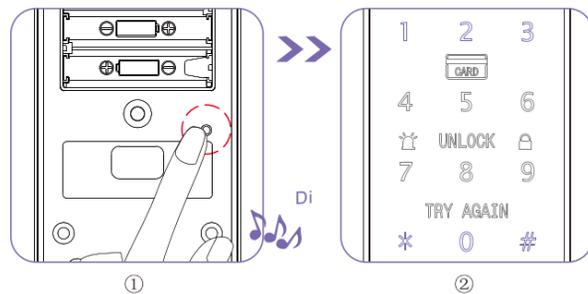


- 1 Prize up back panel decoration plate from the bottom and remove it, load batteries, and press "SET" button for 1 second.
- 2 After heard voice instruction, input initial Admin code 123456 and "#" to enter setting menu.

2.2 Recover to factory mode

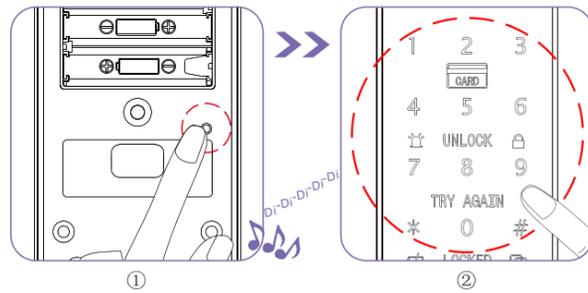


- 1 Prize up back panel decoration plate from the bottom and remove it, load batteries, and press "SET" button for 5 seconds.
- 2 After heard voice instruction, input factory code 4001028628 and "#" to confirm.
- 3 Press "#" again to recover to factory mode (all settings will be cleared) then initial Admin code for entering the menu and opening lock is 123456, and in this mode any fingerprints and any cards can open the lock.

2.3 Register fingerprint

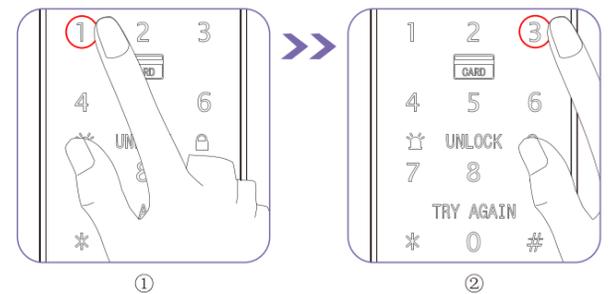


- 1 Follow 2.1 to enter setting menu, and press "1" Add.
- 2 Press "3" to add fingerprint, lights of 1234 numbers and fingerprint sensor turned on.
- 3 Put your finger onto fingerprint sensor till you heard one beep, light of number 4 turns off. Remove your finger and put the same finger again till you heard one beep again, light of number 3 turns off. Continue the same operation till light of number 1 turns off and heard voice "success" which stands for successful registration. Each fingerprint need to be read 4 times for registration.

2.4 Register card

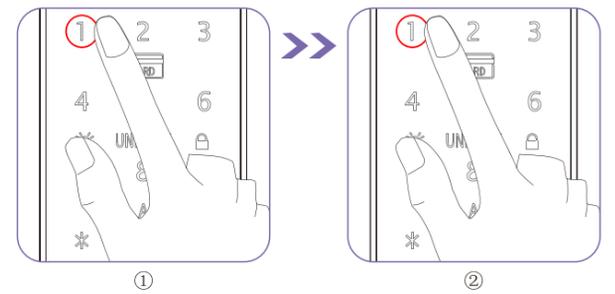


- 1 Follow 2.1 to enter setting menu, and press "1" Add.
- 2 Press "1" to add card.
- 3 Take your card close to RFID card reader (card here position) till you heard voice "success" which stands for successful card registration (100 cards can be registered totally). Then press "\*" to exit, or exit within 5 seconds if without any operation.

2.5 Register password

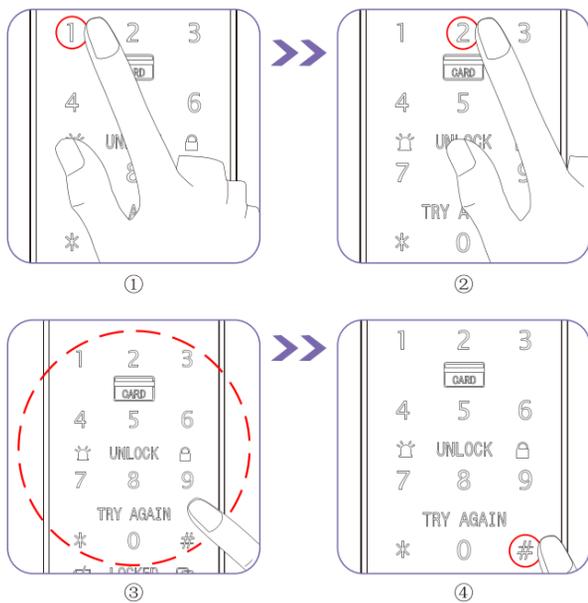


① Follow 2.1 to enter setting menu, and press "1" Add.  
 ② Press "2" to add password.  
 ③ Set your password with 6 digits and press "#", input the same password once again and press "#" to confirm. After you heard voice "success" which stands for successful password registration (1 password can be registered on lock, more passwords can be set in APP). Then press "\*" to exit, or exit within 5 seconds if without any operation.

2.6 Admin code setting

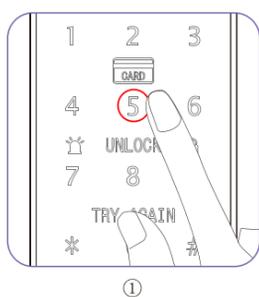



① Follow 2.1 to enter setting menu, and press "5" to set Admin code.  
 ② Input a new code with 6 digits and press "#", input the same code again and press "#" to confirm, after you heard voice "Success" which stands for successful operation.

2.7 Set Normal Opening (N-Open)

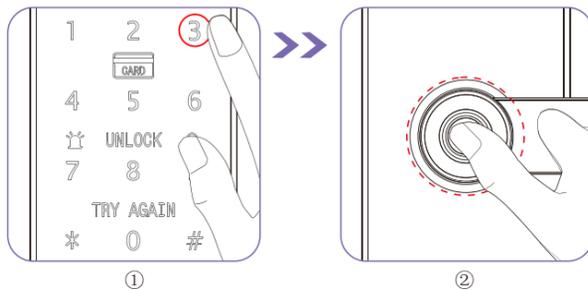

① Follow 2.1 to enter setting menu, and press "3" to set the lock to Normal Opening mode.  
 ② In Normal Opening mode, press handle down could directly open the lock at any time.  
 ③ Use valid fingerprint, password or card to open the lock one time could cancel Normal Opening mode.

2.8 More functions in APP (for BLE version lock)

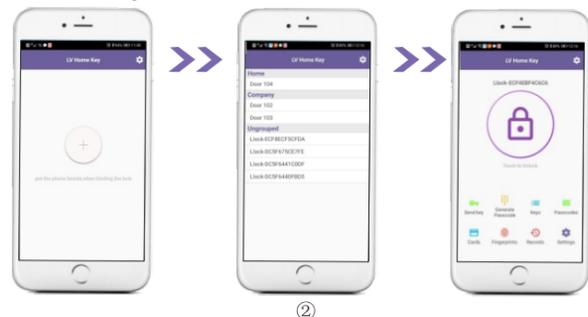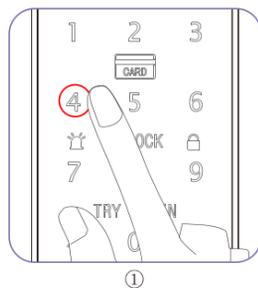


① Please search and download APP "LV home key" from Apple Store or Google Market, use email box to register and sign in.  
 ② Make sure your mobile phone is beside to the lock. Follow 2.1 to enter setting menu, and press "4" BLE. Then press "+" in APP "LV home key" to bind with lock. Or press Setting icon on the right upper corner of APP to add more than one lock. One lock only can bind with one mobile phone, but one mobile phone can bind with unlimited locks.  
 ③ Touch pad lock icon to open the lock. If bind with many locks, choose the correct lock and then touch pad lock icon to open it.

More functions:


- Send key:** Send timed or permanent BLE keys to users or managers so that they can use APP to open the lock and authorize managers to use APP to generate BLE keys and passcodes for users.
- Generate passcode:**
  - a. Generate timed or one-time passcode for opening the lock and can be shared with others.
  - b. Generate a passcode to erase all previously created passcodes except Admin code.
  - c. Customize a passcode that can be remembered easily for opening the lock.
- Keys:** List all created BLE keys and if necessary send to others for opening lock.
- Passcodes:** List all created passcodes and if necessary send to others for opening lock.
- Cards:** Add cards for opening lock (put card on lock sensor), list all card IDs that created from APP, and upload all card IDs that created from lock.
- Fingerprints:** Add fingerprints for opening lock (put finger on lock sensor), list all fingerprints that created from APP, and upload all fingerprints that created from lock.
- Records:** List all BLE keys opening records, and upload all opening records that created from lock.
- Settings:** Check lock battery level; Set lock time; Update lock firmware etc.

3.1 Open lock with fingerprint

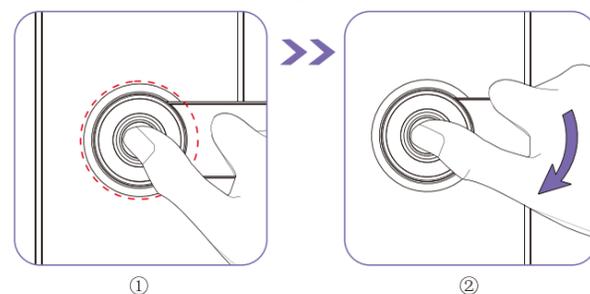


Put any registered finger onto the fingerprint sensor, light turns on, buzzer gives out a short "Di-", and motor rotates. Turn handle to open the lock. After 5 seconds, motor rotates back.

3.2 Open lock with card

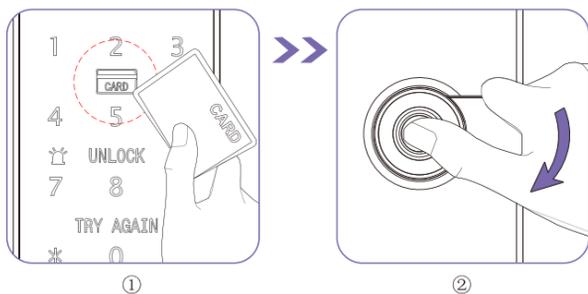

Take any registered card close to card here position, buzzer gives out a short "Di-", and motor rotates. Turn handle to open the lock. After 5 seconds, motor rotates back. (Note: DO NOT touch keypad when use card).


3.3 Open lock with password

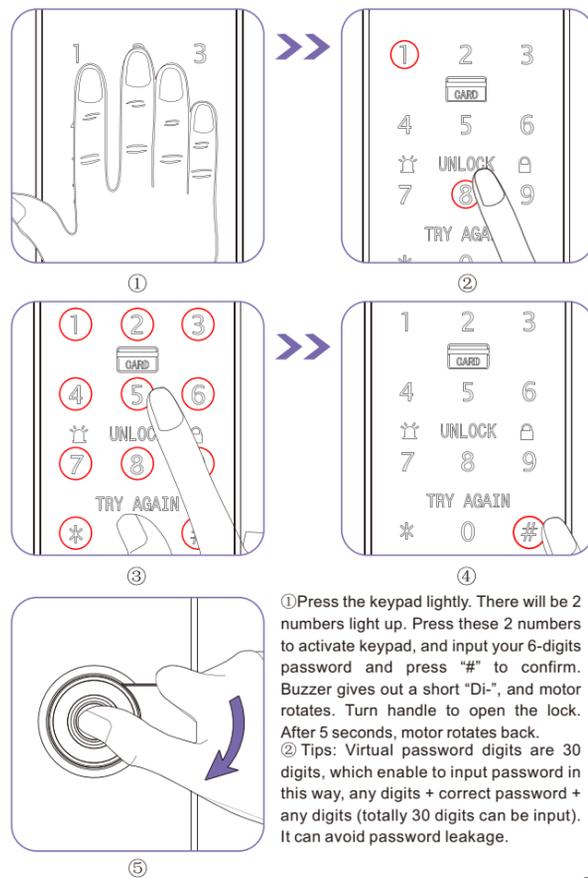

① Press the keypad lightly. There will be 2 numbers light up. Press these 2 numbers to activate keypad, and input your 6-digits password and press "#" to confirm. Buzzer gives out a short "Di-", and motor rotates. Turn handle to open the lock. After 5 seconds, motor rotates back.  
 ② Tips: Virtual password digits are 30 digits, which enable to input password in this way, any digits + correct password + any digits (totally 30 digits can be input). It can avoid password leakage.


4. Delete guide

3.4 Open lock with mechanical key

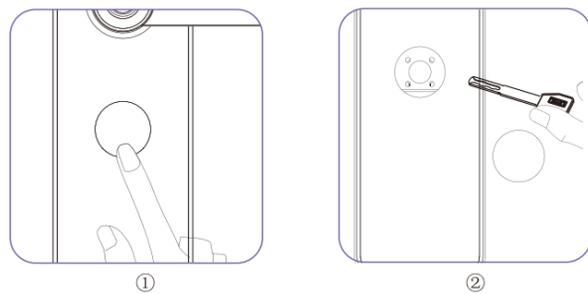


Press right below corner of cylinder cover, open it and insert mechanical key to open the lock.

4.1 Delete fingerprint

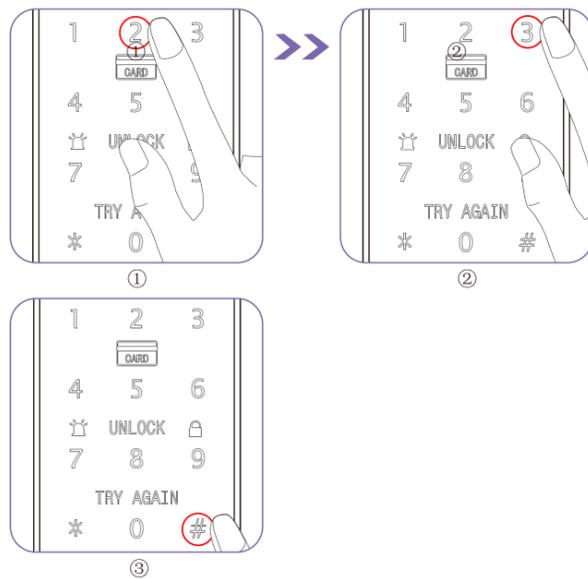


① Follow 2.1 to enter setting menu, and press "2" Delete.  
 ② Press "3" to delete fingerprint.  
 ③ Press "#" to delete all fingerprints, after you heard voice "Success" which stands for successful operation.

4.2 Delete card

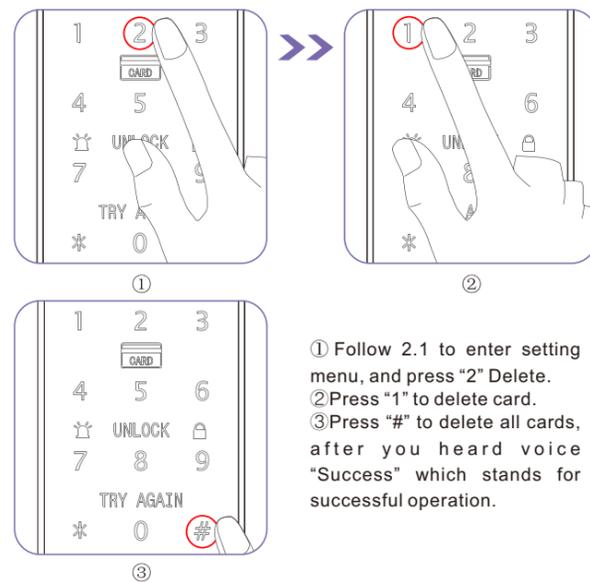

① Follow 2.1 to enter setting menu, and press "2" Delete.  
 ② Press "1" to delete card.  
 ③ Press "#" to delete all cards, after you heard voice "Success" which stands for successful operation.

4.3 Delete password

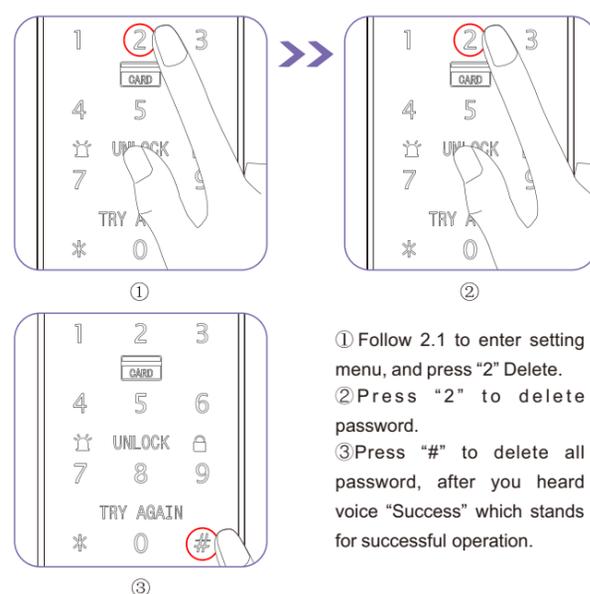

① Follow 2.1 to enter setting menu, and press "2" Delete.  
 ② Press "2" to delete password.  
 ③ Press "#" to delete all passwords, after you heard voice "Success" which stands for successful operation.